


MOTOR DRIVER CARD

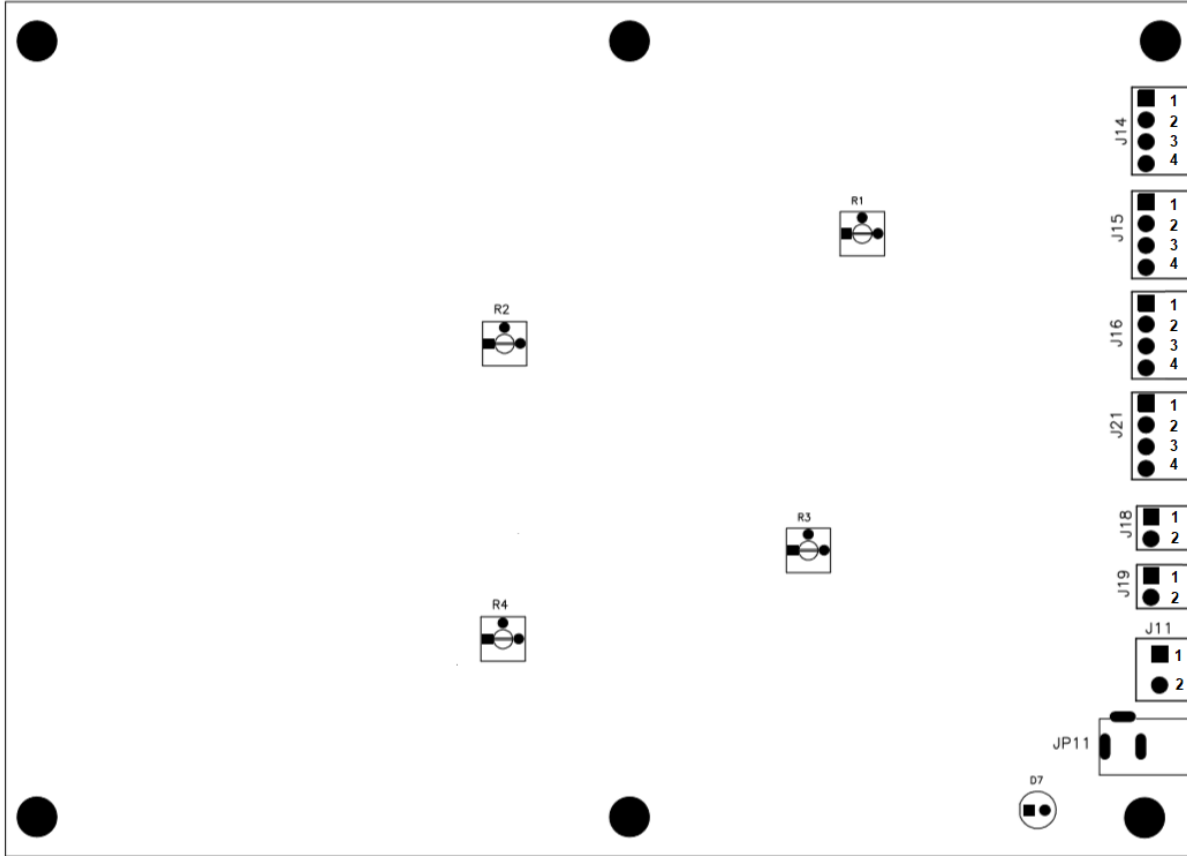

PIN ASSIGNMENT AND DESCRIPTION

J11 POWER INPUT

PIN	NAME	DESCRIPTION
1	+24 VDC	+24 VDC INPUT
2	GND	+24 VDC RETURN

JP11 POWER INPUT

Center Pin: +24 VDC
Inside Contact Diameter: 2 mm
Outside Contact Diameter: 6.4 mm
Center Pin Length: 8 mm

J19 +5 VDC OUTPUT

PIN	NAME	DESCRIPTION
1	+5 VDC	+5 VDC OUTPUT
2	GND	+5 VDC RETURN

The R1 potentiometer adjusts the X-axis stepper motor running current. The maximum current is 3.0 Amps when the R1 potentiometer is turned fully CW. The idle current is 70% of the running current.

The R2 potentiometer adjusts the Y-axis stepper motor running current. The maximum current is 3.0 Amps when the R2 potentiometer is turned fully CW. The idle current is 70% of the running current.

The R3 potentiometer adjusts the Z-axis stepper motor running current. The maximum current is 3.0 Amps when the R3 potentiometer is turned fully CW. The idle current is 70% of the running current.

The R4 potentiometer adjusts the W-axis stepper motor running current. The maximum current is 3.0 Amps when the R4 potentiometer is turned fully CW. The idle current is 70% of the running current.

The resolution of the micro-stepper driver is 10 micro-steps per step.

J14 X-MOTOR CONNECTION

The X-axis motor should be connected to this connector.

PIN	NAME	DESCRIPTION
1	PHAX+	STEPPING MOTOR Phase A+
2	PHAX-	STEPPING MOTOR PHASE A-
3	PHBX+	STEPPING MOTOR PHASE B+
4	PHBX-	STEPPING MOTOR PHASE B-

J15 Y-MOTOR CONNECTION

The Y-axis motor should be connected to this connector.

PIN	NAME	DESCRIPTION
1	PHAY+	STEPPING MOTOR PHASE A+
2	PHAY-	STEPPING MOTOR PHASE A-
3	PHBY+	STEPPING MOTOR PHASE B+
4	PHBY-	STEPPING MOTOR PHASE B-

J16 Z-MOTOR CONNECTION

The Z-axis motor should be connected to this connector.


PIN	NAME	DESCRIPTION
1	PHAZ+	STEPPING MOTOR PHASE A+
2	PHAZ-	STEPPING MOTOR PHASE A-
3	PHBZ+	STEPPING MOTOR PHASE B+
4	PHBZ-	STEPPING MOTOR PHASE B-

J21 W-MOTOR CONNECTION

The W-axis motor should be connected to this connector.

PIN	NAME	STEPPING MOTOR
1	PHAW+	STEPPING MOTOR PHASE A+
2	PHAW-	STEPPING MOTOR PHASE A-
3	PHBW+	STEPPING MOTOR PHASE B+
4	PHBW-	STEPPING MOTOR PHASE B-

CONTROLLER CARD

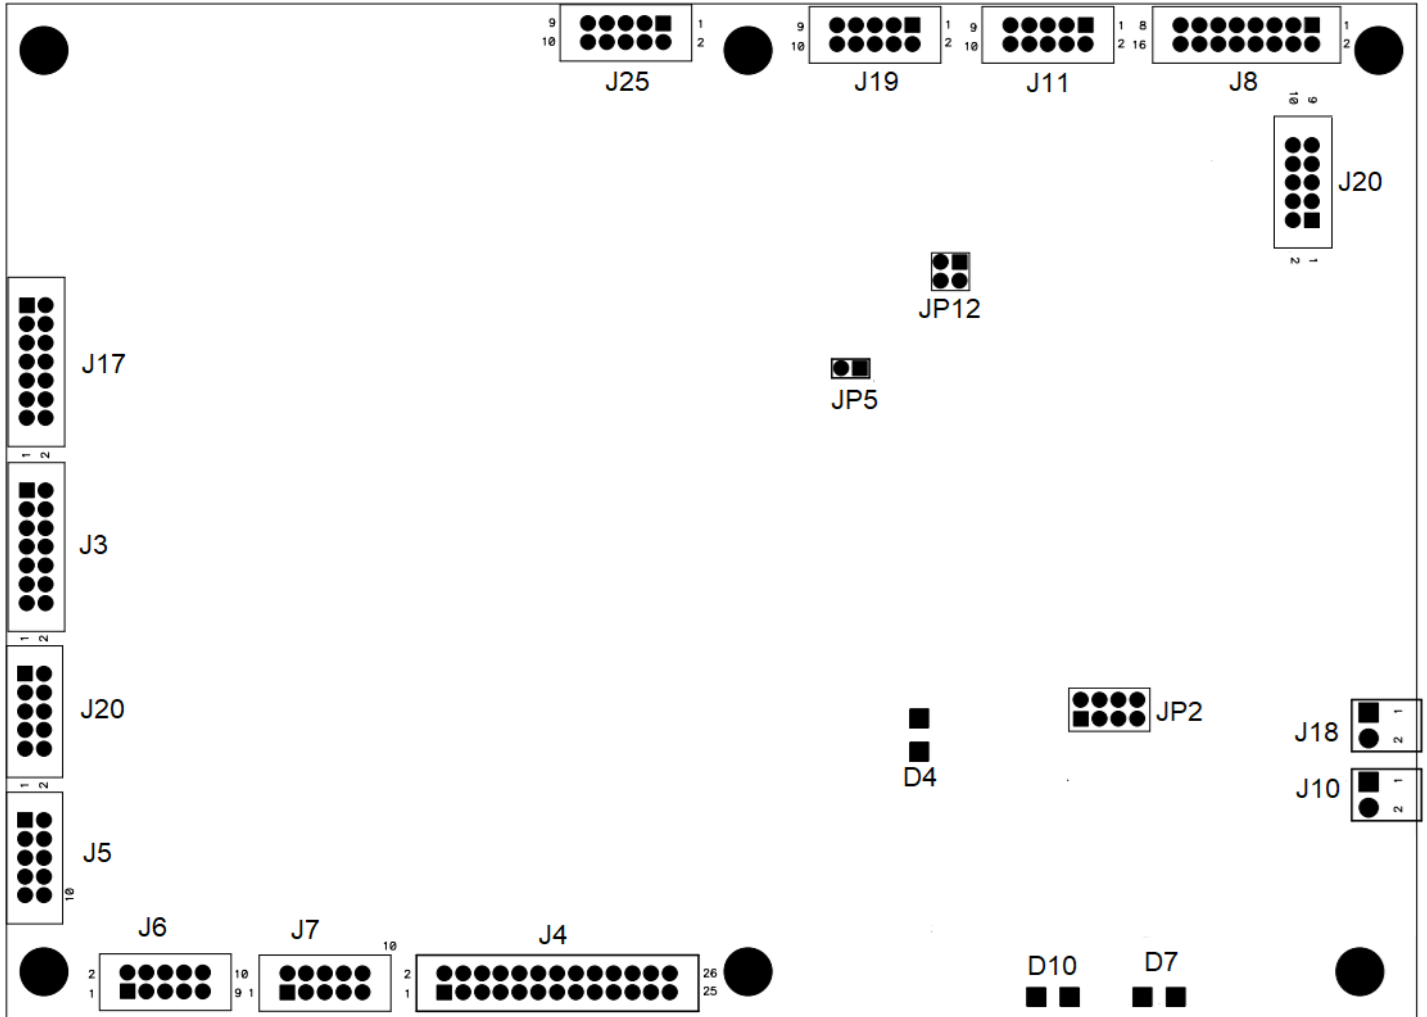


J10
+5 VDC INPUT

PIN	NAME	DESCRIPTION
1	+5 VDC	+5 VDC INPUT
2	GND	+5 VDC RETURN

J18
STATUS LED

PIN	NAME	DESCRIPTION
1	+5 VDC	+5 VDC INPUT
2	LED	STATUS LED

 J5 X-Axis Limits and Home Switch Connection




0.1" (2.54 mm) Pitch Header

The X-axis positive, negative and home switches should be connected to this port. A normally open switch should be placed between input pins and GND if necessary.

A 10 KOHM pull-up resistor is placed between each input and +5 VDC.


PIN	NAME	DESCRIPTION
1	POS-LIMIT-X	Positive Limit Switch Input
2	+5 VDC	+5 VDC
3	GND	+5 VDC Return
4	HOME-X	Home Switch Input
5	+5 VDC	+5 VDC
6	GND	+5 VDC Return
7	NEG-LIMIT-X	Negative Limit Switch Input
8	+5 VDC	+5 VDC
9	GND	+5 VDC Return
10	NC	No Connection

9-pin DB-9, Male Connector Using DB9-Male to IDC-10 Pin Flat Ribbon Cable (Not Included)

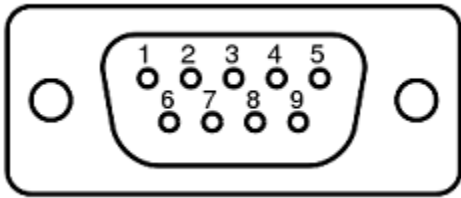

PIN	NAME	DESCRIPTION
1	POS-LIMIT-X	X-Axis Positive Limit Switch Input
2	GND	System Ground
3	+5 VDC	+5 VDC
4	NEG-LIMIT-X	X-Axis Negative Limit Switch Input
5	GND	System Ground
6	+5 VDC	+5 VDC
7	HOME-X	Home Switch Input
8	GND	System Ground
9	+5 VDC	+5 VDC

 J6 Y-Axis Limits and Home Switch Connection




0.1" (2.54 mm) Pitch Header

The Y-axis positive, negative and home switches should be connected to this port. A normally open switch should be placed between input pins and GND if necessary.

A 10 KOHM pull-up resistor is placed between each input and +5 VDC.

PIN	NAME	DESCRIPTION
1	POS-LIMIT-Y	Positive Limit Switch Input
2	+5 VDC	+5 VDC
3	GND	+5 VDC Return
4	HOME-Y	Home Switch Input
5	+5 VDC	+5 VDC
6	GND	+5 VDC Return
7	NEG-LIMIT-Y	Negative Limit Switch Input
8	+5 VDC	+5 VDC
9	GND	+5 VDC Return
10	NC	No Connection


9-pin DB-9, Male Connector Using DB9-Male to IDC-10 Pin Flat Ribbon Cable (Not Included)

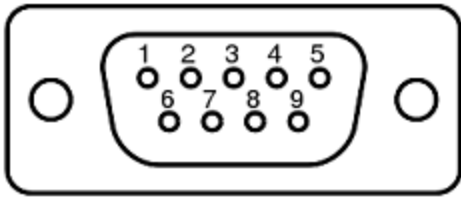

PIN	NAME	DESCRIPTION
1	POS-LIMIT-Y	Y-Axis Positive Limit Switch Input
2	GND	System Ground
3	+5 VDC	+5 VDC
4	NEG-LIMIT-Y	Y-Axis Negative Limit Switch Input
5	GND	System Ground
6	+5 VDC	+5 VDC
7	HOME-Y	Home Switch Input
8	GND	System Ground
9	+5 VDC	+5 VDC

J7

 Z-Axis Limits and Home Switch Connection




0.1" (2.54 mm) Pitch Header

The Z-axis positive, negative and home switches should be connected to this port. A normally open switch should be placed between input pins and GND if necessary.

A 10 KOHM pull-up resistor is placed between each input and +5 VDC.

PIN	NAME	DESCRIPTION
1	POS-LIMIT-Z	Positive Limit Switch Input
2	+5 VDC	+5 VDC
3	GND	+5 VDC Return
4	HOME-Z	Home Switch Input
5	+5 VDC	+5 VDC
6	GND	+5 VDC Return
7	NEG-LIMIT-Z	Negative Limit Switch Input
8	+5 VDC	+5 VDC
9	GND	+5 VDC Return
10	NC	No Connection


9-pin DB-9, Male Connector Using DB9-Male to IDC-10 Pin Flat Ribbon Cable (Not Included)

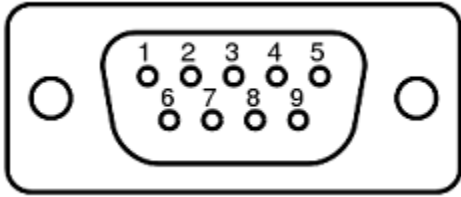

PIN	NAME	DESCRIPTION
1	POS-LIMIT-Z	Z-Axis Positive Limit Switch Input
2	GND	System Ground
3	+5 VDC	+5 VDC
4	NEG-LIMIT-Z	Z-Axis Negative Limit Switch Input
5	GND	System Ground
6	+5 VDC	+5 VDC
7	HOME-Z	Home Switch Input
8	GND	System Ground
9	+5 VDC	+5 VDC

J20

 W-Axis Limits and Home Switch Connection




0.1" (2.54 mm) Pitch Header

The W-axis positive, negative and home switches should be connected to this port. A normally open switch should be placed between input pins and GND if necessary.

A 10 KOHM pull-up resistor is placed between each input and +5 VDC.


PIN	NAME	DESCRIPTION
1	POS-LIMIT-W	Positive Limit Switch Input
2	+5 VDC	+5 VDC
3	GND	+5 VDC Return
4	HOME-W	Home Switch Input
5	+5 VDC	+5 VDC
6	GND	+5 VDC Return
7	NEG-LIMIT-W	Negative Limit Switch Input
8	+5 VDC	+5 VDC
9	GND	+5 VDC Return
10	NC	No Connection

9-pin DB-9, Male Connector Using DB9-Male to IDC-10 Pin Flat Ribbon Cable (Not Included)

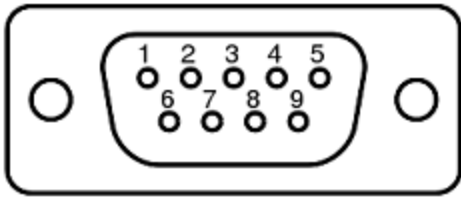

PIN	NAME	DESCRIPTION
1	POS-LIMIT-W	W-Axis Positive Limit Switch Input
2	GND	System Ground
3	+5 VDC	+5 VDC
4	NEG-LIMIT-W	W-Axis Negative Limit Switch Input
5	GND	System Ground
6	+5 VDC	+5 VDC
7	HOME-W	Home Switch Input
8	GND	System Ground
9	+5 VDC	+5 VDC

 J4 Analog Joystick Interface (Optional)




0.1" (2.54 mm) Pitch Header

This port is used to connect to OES' joystick.


PIN	NAME	DESCRIPTION
1	ANALOG-X	Analog-X Input
2	ANALOG-W	Analog-Y Input
3	ANALOG-Y	High Speed Selection Input
4	ANALOG-Z	Medium Speed Selection Input
5	HIGH-SPEED	Low Speed Selection Input
6	GND	System Ground
7	MEDIUM-SPEED	Analog-Z Input
8	GND	System Ground
9	LOW-SPEED	System Ground
10	GND	System Ground
11	W-SELECT	W-axis Selection Input
12	+5 VDC	+5 VDC Output
13	NC	No Connection
14	+5 VDC	+5 VDC Output
15	NC	No Connection
16	+5 VDC	+5 VDC Output

25-pin DB-25, Female Connector Using DB25-Female to IDC-26 Pin Flat Ribbon Cable (Not Included)

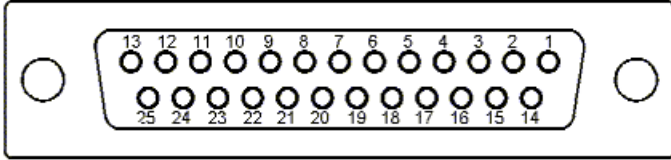

PIN	NAME	DESCRIPTION
1	ANALOG-X	Analog-X Input
2	ANALOG-Y	Analog-Y Input
3	HIGH-SPEED	High Speed Selection Input
4	MEDIUM-SPEED	Medium Speed Selection Input
5	LOW-SPEED	Low Speed Selection Input
6	W-SELECT	W-axis Selection Key
15	ANALOG-Z	Analog-Z Input
16	GND	System Ground
17	GND	System Ground
18	GND	System Ground
19	+5 VDC	+5 VDC
20	+5 VDC	+5 VDC
21	+5 VDC	+5 VDC

 J11 INPUT PORT (Optional)




0.1" (2.54 mm) Pitch Header

This port is used to connect and read the state of a discrete signal like a sensor, reed switch or other similar devices, TTL Compatible.

The related command is IN. Please refer to Operating and Programming Reference Manual.


PIN	NAME	DESCRIPTION
1	INBIT0	Discrete Input 0
2	INBIT1	Discrete Input 1
3	INBIT2	Discrete Input 2
4	INBIT3	Discrete Input 3
5	INBIT4	Discrete Input 4
6	INBIT5	Discrete Input 5
7	INBIT6	Discrete Input 6
8	INBIT7	Discrete Input 7
9	GND	System Ground
10	+5 VDC	+5 VDC

9-pin DB-9, Male Connector Using DB9-Male to IDC-10 Pin Flat Ribbon Cable (Not Included)

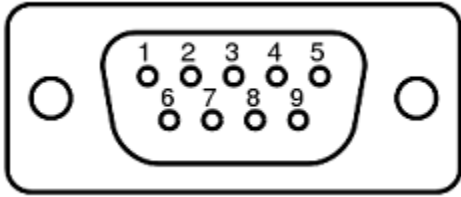

PIN	NAME	DESCRIPTION
1	INBIT0	Discrete Input 0
2	INBIT2	Discrete Input 2
3	INBIT4	Discrete Input 4
4	INBIT6	Discrete Input 6
5	GND	System Ground
6	INBIT1	Discrete Input 1
7	INBIT3	Discrete Input 3
8	INBIT5	Discrete Input 5
9	INBIT7	Discrete Input 7

 J20 OUTPUT PORT (Optional)




0.1" (2.54 mm) Pitch Header

This port is used to connect and read the state of a discrete signal like a sensor, reed switch or other similar devices, TTL Compatible.

The related commands are OUT, SETBIT, CLRBIT. Please refer to Operating and Programming Reference Manual.

PIN	NAME	DESCRIPTION
1	OUTBIT0	Discrete Output 0
2	OUTBIT1	Discrete Output 1
3	OUTBIT2	Discrete Output 2
4	OUTBIT3	Discrete Output 3
5	OUTBIT4	Discrete Output 4
6	OUTBIT5	Discrete Output 5
7	OUTBIT6	Discrete Output 6
8	OUTBIT7	Discrete Output 7
9	GND	System Ground
10	+5 VDC	+5 VDC

9-pin DB-9, Male Connector Using DB9-Male to IDC-10 Pin Flat Ribbon Cable (Not Included)

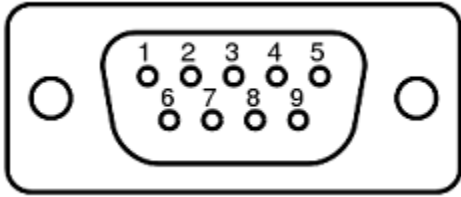

PIN	NAME	DESCRIPTION
1	OUTBIT0	Discrete Output 0
2	OUTBIT2	Discrete Output 2
3	OUTBIT4	Discrete Output 4
4	OUTBIT6	Discrete Output 6
5	GND	System Ground
6	OUTBIT1	Discrete Output 1
7	OUTBIT3	Discrete Output 3
8	OUTBIT5	Discrete Output 5
9	OUTBIT7	Discrete Output 7

J3 Quadrature Encoder Interface (Optional)




0.1" (2.54 mm) Pitch Header

This port is used to connect to quadrature encoder inputs.

PIN	NAME	DESCRIPTION
1	+5 VDC	+5 VDC
2	GND	System Ground
3	+5 VDC	+5 VDC
4	GND	System Ground
5	+5 VDC	+5 VDC
6	GND	System Ground
7	WA	W-Axis Channel-A Quadrature Input, TTL Input
8	XA	X-Axis Channel-A Quadrature Input, TTL Input
9	WB	W-Axis Channel-B Quadrature Input, TTL Input
10	XB	X-Axis Channel-B Quadrature Input, TTL Input
11	YA	Y-Axis Channel-A Quadrature Input, TTL Input
12	ZA	Z-Axis Channel-A Quadrature Input, TTL Input
13	YB	Y-Axis Channel-B Quadrature Input, TTL Input
14	ZB	Z-Axis Channel-B Quadrature Input, TTL Input

 
J19 COMMAND PORT



0.1" (2.54 mm) Pitch Header

PIN	NAME	DESCRIPTION
1		Reserved
2		Reserved
3		Reserved
4		Open, A normally closed switch should be used for Limits and Home Switches. Grounded, A normally open switch should be used for Limits and Home Switches.
5		Reserved
6		Reserved
7		Open, The OUTPUT port is HIGH on power up. Grounded, The OUTPUT port is LOW on power up.
8		Open, The joystick is enabled on power up. Grounded, The joystick is disabled on power up.
9	GND	System Ground
10	+5 VDC	+5 VDC

 J25 RS232 Interface




0.1" (2.54 mm) Pitch Header

This port is used to connect the RS232 cable.

PIN	NAME	DESCRIPTION
3	DATA-XMT	Data Transmit to PC
4	RESET	RESET Signal from PC to Controller, Should Be Set to Clear
5	DATA-RCV	Data Receive from PC
9	GND	System Ground

9-pin DB-9, Female Connector Using DB9-Female to IDC-10 Pin Flat Ribbon Cable (Included)

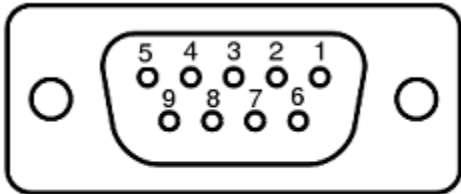

PIN	NAME	DESCRIPTION
2	DATA-XMT	Data Transmit to PC
3	DATA-RCV	Data Receive from PC
7	RESET	RESET Signal from PC to Controller, Should Be Set to Clear
5	GND	System Ground

PLEASE DO NOT CONNECT OR DISCONNECT ANY CABLES WHILE THE POWER IS ON.

Specifications are subject to change without notice.

LIMITATION OF LIABILITY

Optimal Engineering Systems, Inc. (OES) hardware and software products are not intended or authorized for use in any manner where human life or safety is at risk. OES' products are not intended for life support equipment.

In no event shall Optimal Engineering Systems, Inc. be liable to any customer for costs or damages, including lost profits, lost savings or other incidental or consequential damages arising out of the use or inability to use such products even if Optimal Engineering Systems, Inc. or an authorized Optimal Engineering Systems, Inc. representative has been advised of the possibility of such damages, or for any claim by any other party. In any event, Optimal Engineering Systems liability arising in any manner in connection with the products, whether based in contract, product liability or tort, shall not exceed the purchase price of the product.